 
 


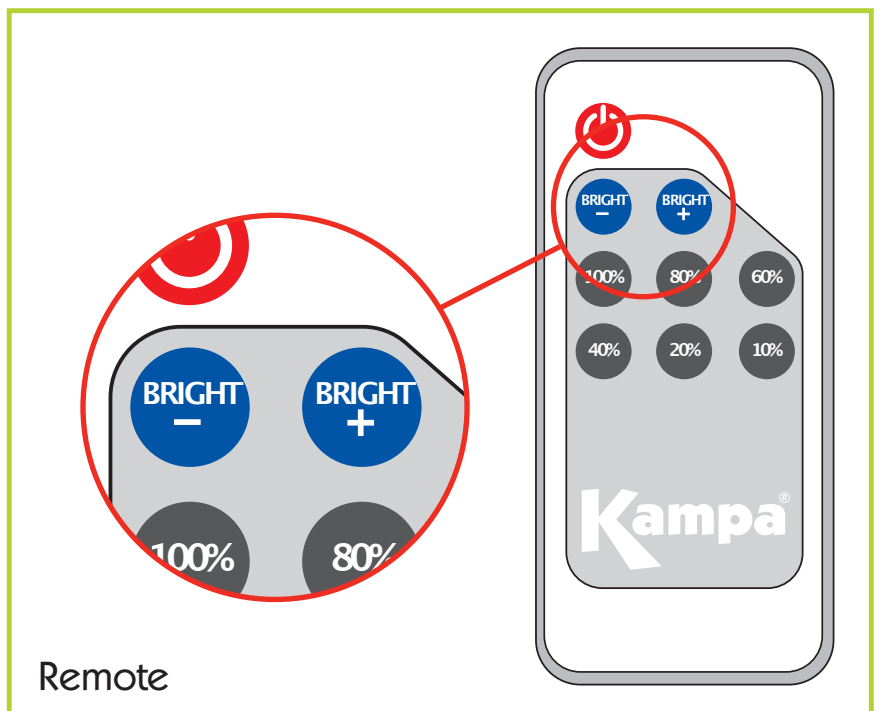

## In-Line RF Remote Controller Additional Instructions

If the controller fails to respond to inputs from the remote control the remote may need to be paired.

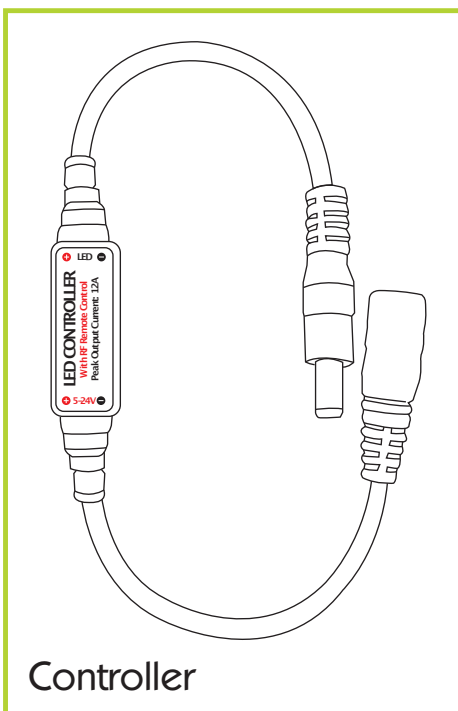

### Pairing Instructions

 
The remote may need to be paired to the controller before first use. Connect the controller to the power source and to the SabreLink light, then press the blue coloured Bright - and Bright + buttons simultaneously. The remote will broadcast a pairing signal and any controllers within range will now respond to the remote. Multiple controllers can respond to a single remote, so if you wish to use multiple controllers independently you must first unplug the power from all of the controllers except for the one that you wish to pair.

If the remote does not work please check the condition of the battery. The red light, on the remote, should be bright when any of the buttons are pressed. Replace with a 3V CR2025 battery.

SABRE-UM-ADD-0416-Rev.B

## Inline RF Remote Controller ekstra instruktioner

Hvis controlleren ikke reagerer på fjernbetjening skal den parres.

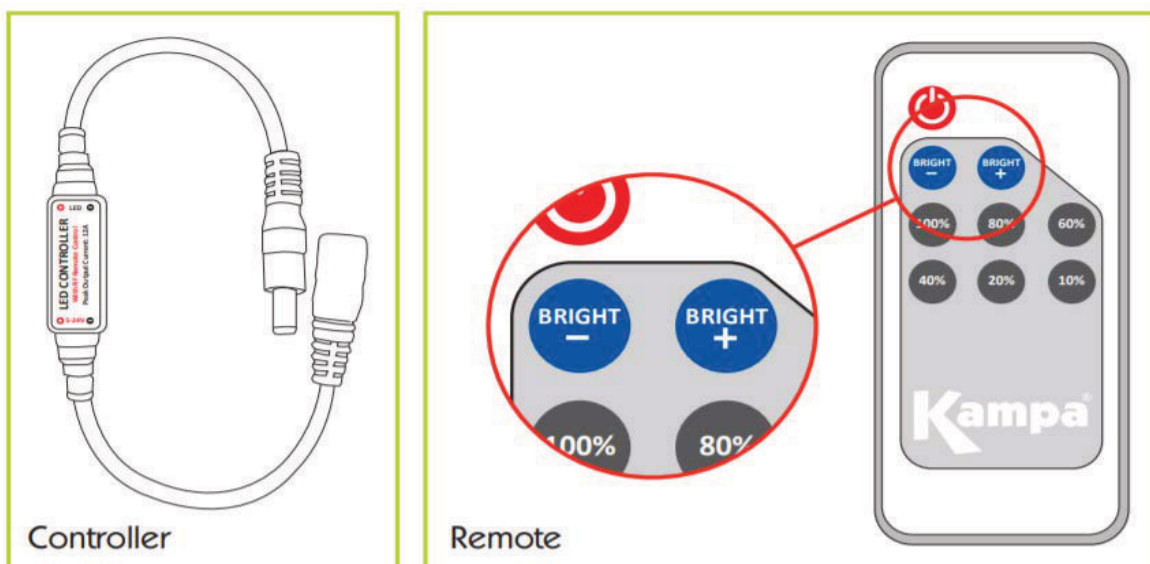

### Parringsinstruktioner

Fjernbetjeningen skal parres med controlleren før brug.

Sæt controlleren mellem strømstikket og Sabre Link lysene, tryk Bright + and Bright - (De blå knapper) samtidigt.

Fjernbetjeningen vil nu udsende et parringssignal og alle controller indenfor rækkevidde vil nu reagere på fjernbetjeningen.

Flere controller kan kobles på den enkelte fjernbetjening, så hvis du ønsker at bruge enkelte controller uafhængigt, må du koble strømmen fra, undtagen på dem du ønsker at parre.

Hvis fjernbetjeningen ikke virker, så tjek venligst batteriet. Det røde lys på fjernbetjening skal lyse når knapperne trykkes ned, hvis ikke skift batteri ( 3V CR2025 )